


R	101, 102,	103,	104, 105, 106, 107, 109, 111, 110,	112,	116, 113, 115, 117,	204, 202, 242,	206, 207, 208, 205, 235, 210, 209, 211,	238, 237, 212, 236, 213,	239, 240, 214,	215, 241, 216,	244, 253, 217, 245, 246, 220,	247, 218, 219, 222, 228, 248,	54, 249, 23, 226, 227, 250, 223, 221, 224, 224, 224, 374, 364, 35,	225, 255, 228, 231, 257, 201, 258, 256, 232, 259, 260, 483, 44, 261, 407, 42, 403, 34, 402, 409,							
R	301, 302,	304, 449, 51, 305, 303, 306, 415, 413, 418, 308, 414, 311, 308, 314, 321, 411, 323, 320, 322, 412, 326, 325, 416, 319, 327, 312, 328, 329, 338, 421, 344, 336, 330, 340, 52, 32, 333, 312, 339, 334, 332, 333, 331, 420, 318, 316, 310, 312, 313, 315,	342, 347, 200,	345, 343, 346, 344, 35,	348,	351, 349, 350, 352, 36, 355,	353, 354, 358, 359, 53, 37,	360, 361, 307,	404,	405,	243,	406,	425, 51,	408, 409,	252, 251, 413, 253, 254, 401, 404, 412, 402,						
C	431, 104, 432, 103, 105,	106, 108, 107,	109, 113,	110, 111, 124, 112, 312,	119, 118,	117, 120, 121,	134, 123,	135, 126, 125, 127, 133,	201, 202, 203, 400,	205, 204,	207, 208, 206, 209, 212, 232, 233, 210, 234, 211, 235, 231,	237	236, 213, 249, 214,	217, 215, 218, 248, 239, 240, 219, 220, 241, 216,	244, 242, 243, 228, 224, 403, 245, 227, 247, 214, 62, 38, 226, 250,						
C	301, 426, 302, 423,	304, 303, 418, 415, 424, 422, 419, 305, 307, 306, 416, 313,	420, 257, 318, 258, 417, 259, 317, 319, 421, 280,	320, 321, 261, 262, 323, 425, 330, 327, 325, 326, 324, 328, 331,	329, 431, 427, 311,	130, 132,	309, 308,	310, 414, 129, 340, 128, 337, 336, 339,	338,	341, 342,	343,	344,	345, 346,	347,	348,	407,	408, 409,	405, 406,	40,		
L	101, 101,	103, 104,	102, 102, 105,	106,	301, 107,	107, 109, 108,	108,	110, 109,	111,	112,	202, 201, 115, 104, 05, 117,	116, 203, 205,	114, 204, 206, 230,	208, 207, 209, 210, 231, 232,	213, 212, 214, 215,	218, 219,	233, 236, 220, 234, 235, 223, 221, 216, 222, 225,	436, 435,	226, 420,	421, 227, 422,	406 + 413, 414, 415, 404, 425, 403, 402, 27, 428, 426,

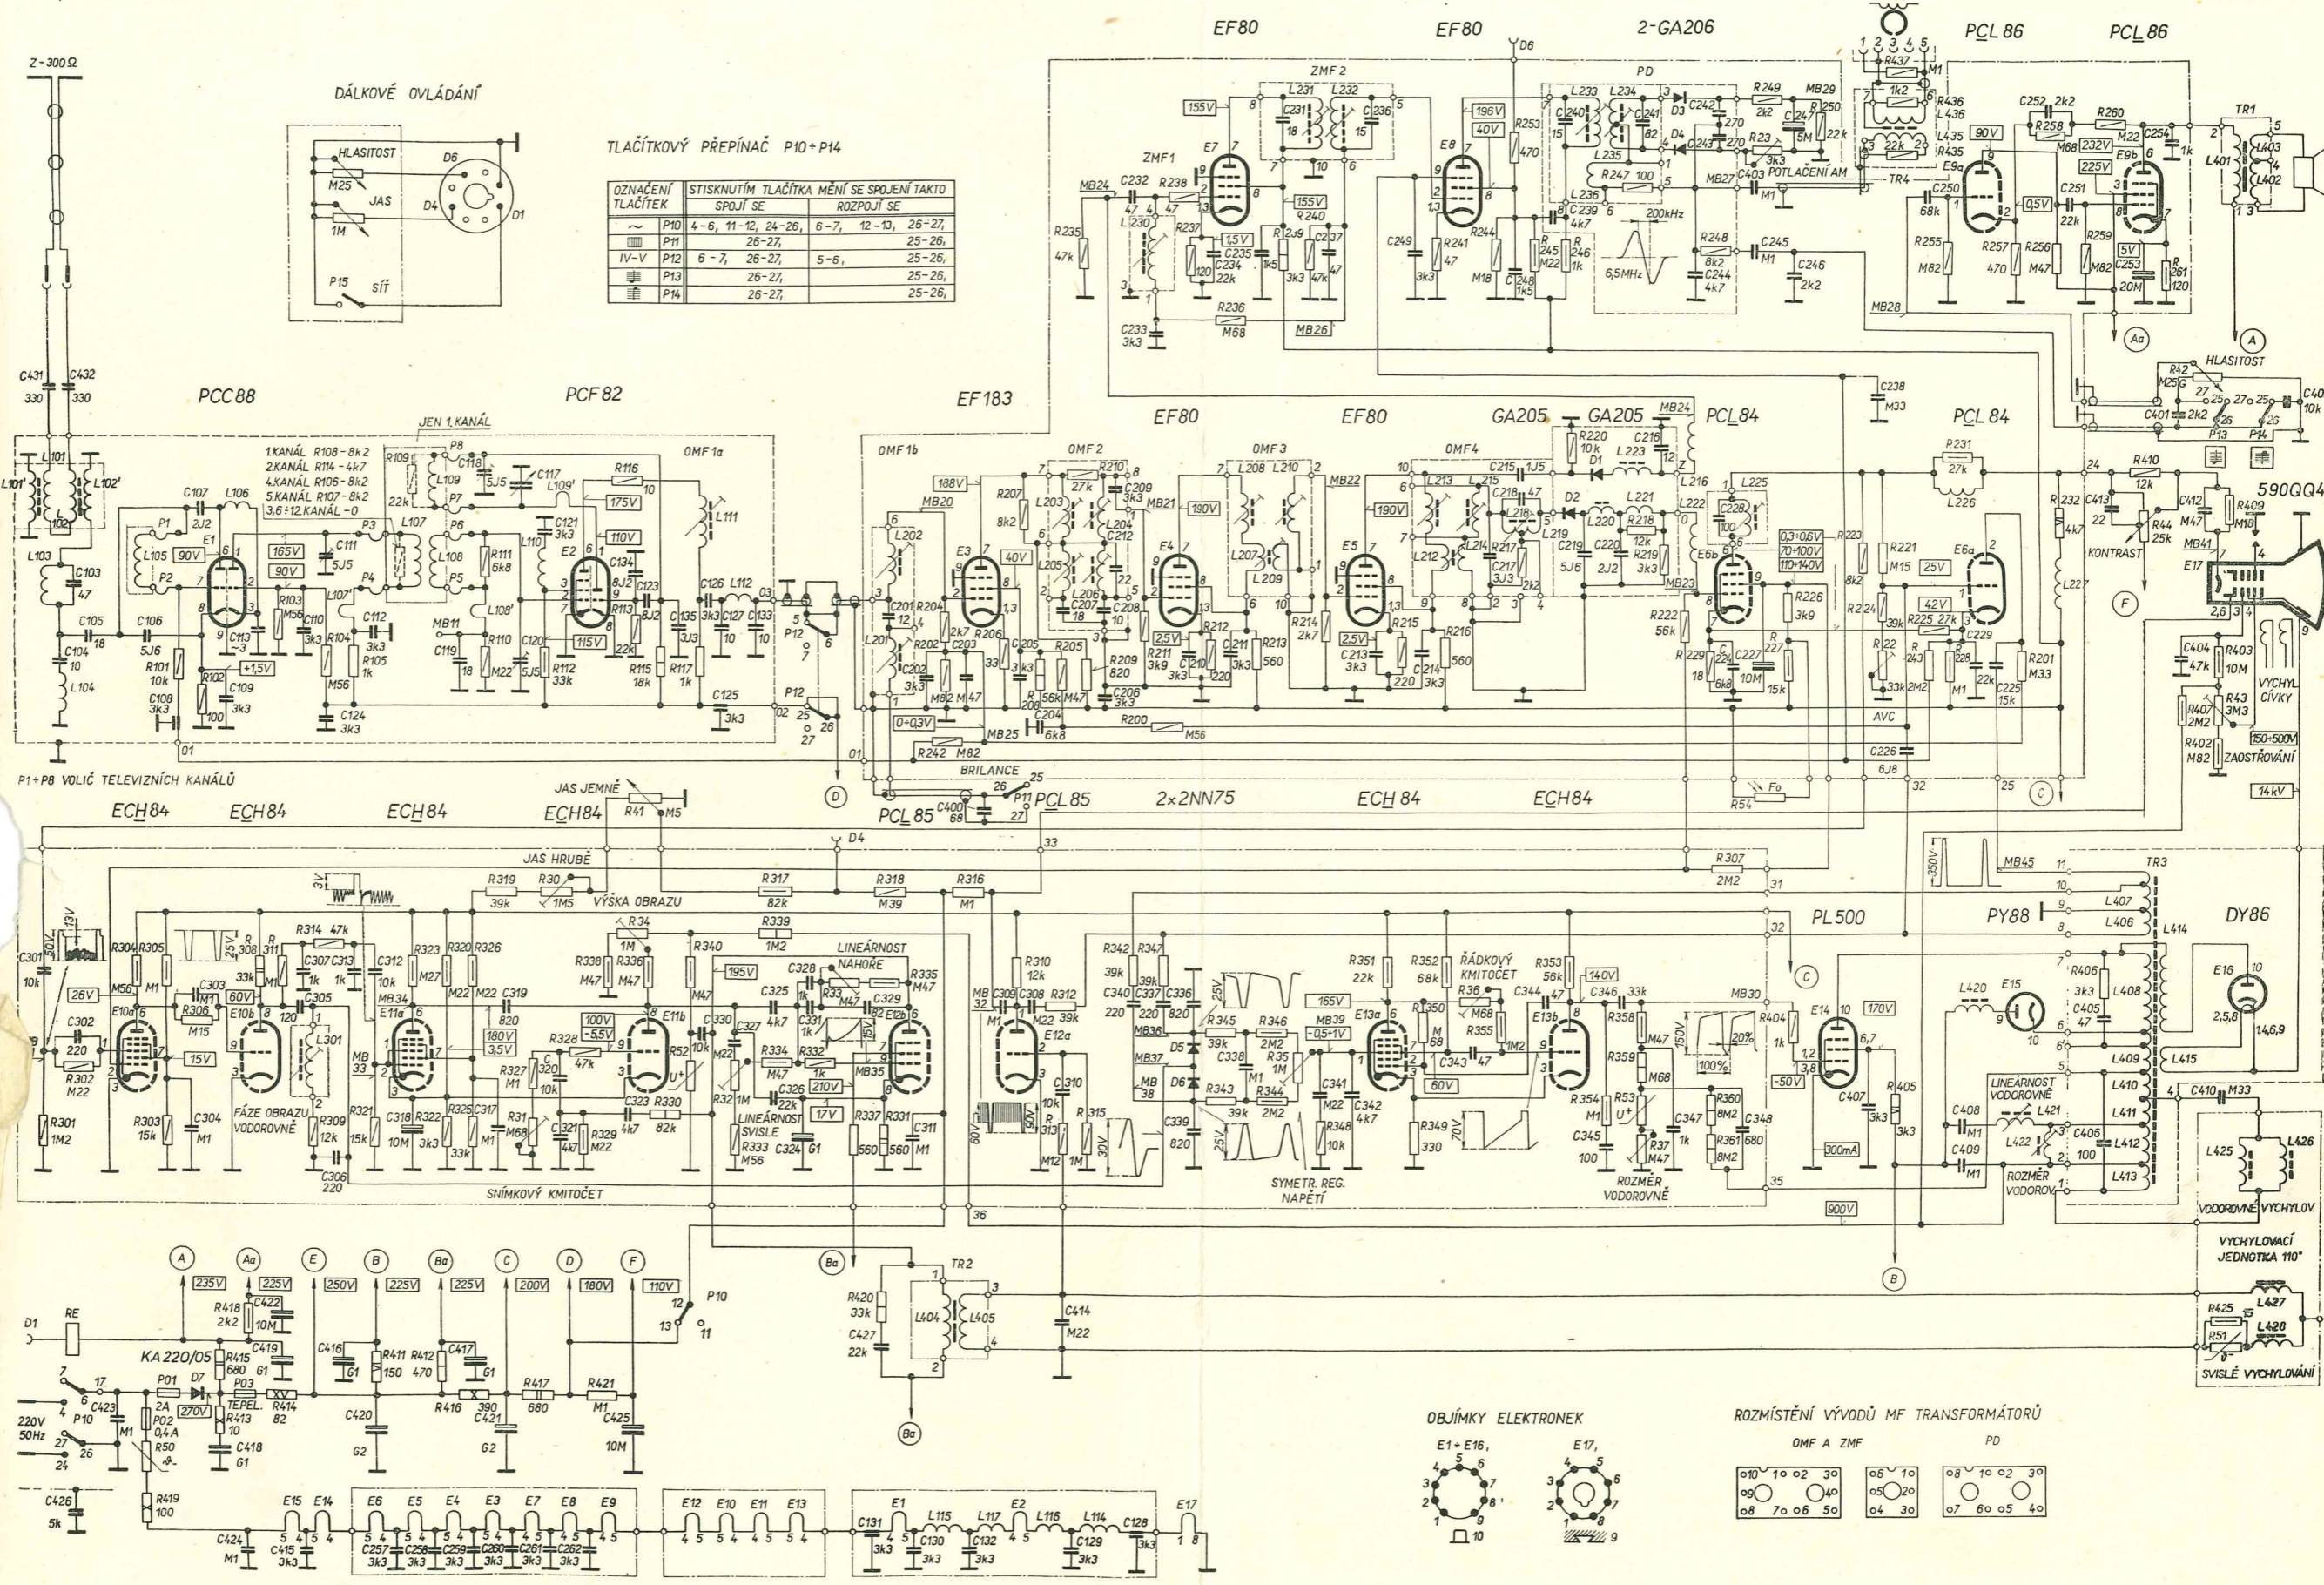


**TLAČÍTKOVÝ PŘEPÍNAČ P10+P14**

OZNAČENÍ TLAČÍTEK	STISKNUTÍM TLAČÍTKA MĚNÍ SE SPOJENÍ TAKTO
P10	4-6, 11-12, 24-26, 6-7, 12-13, 26-27
P11	26-27, 25-26
P12	6-7, 26-27, 5-6, 25-26
P13	26-27, 25-26
P14	26-27, 25-26

P1+P8 VOLÍČE TELEVIZNÍCH KANÁLŮ

OBJÍMKY ELEKTRONEK

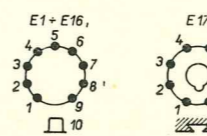

ROZMÍSTĚNÍ VÝVODŮ MF TRANSFORMÁTORŮ

