

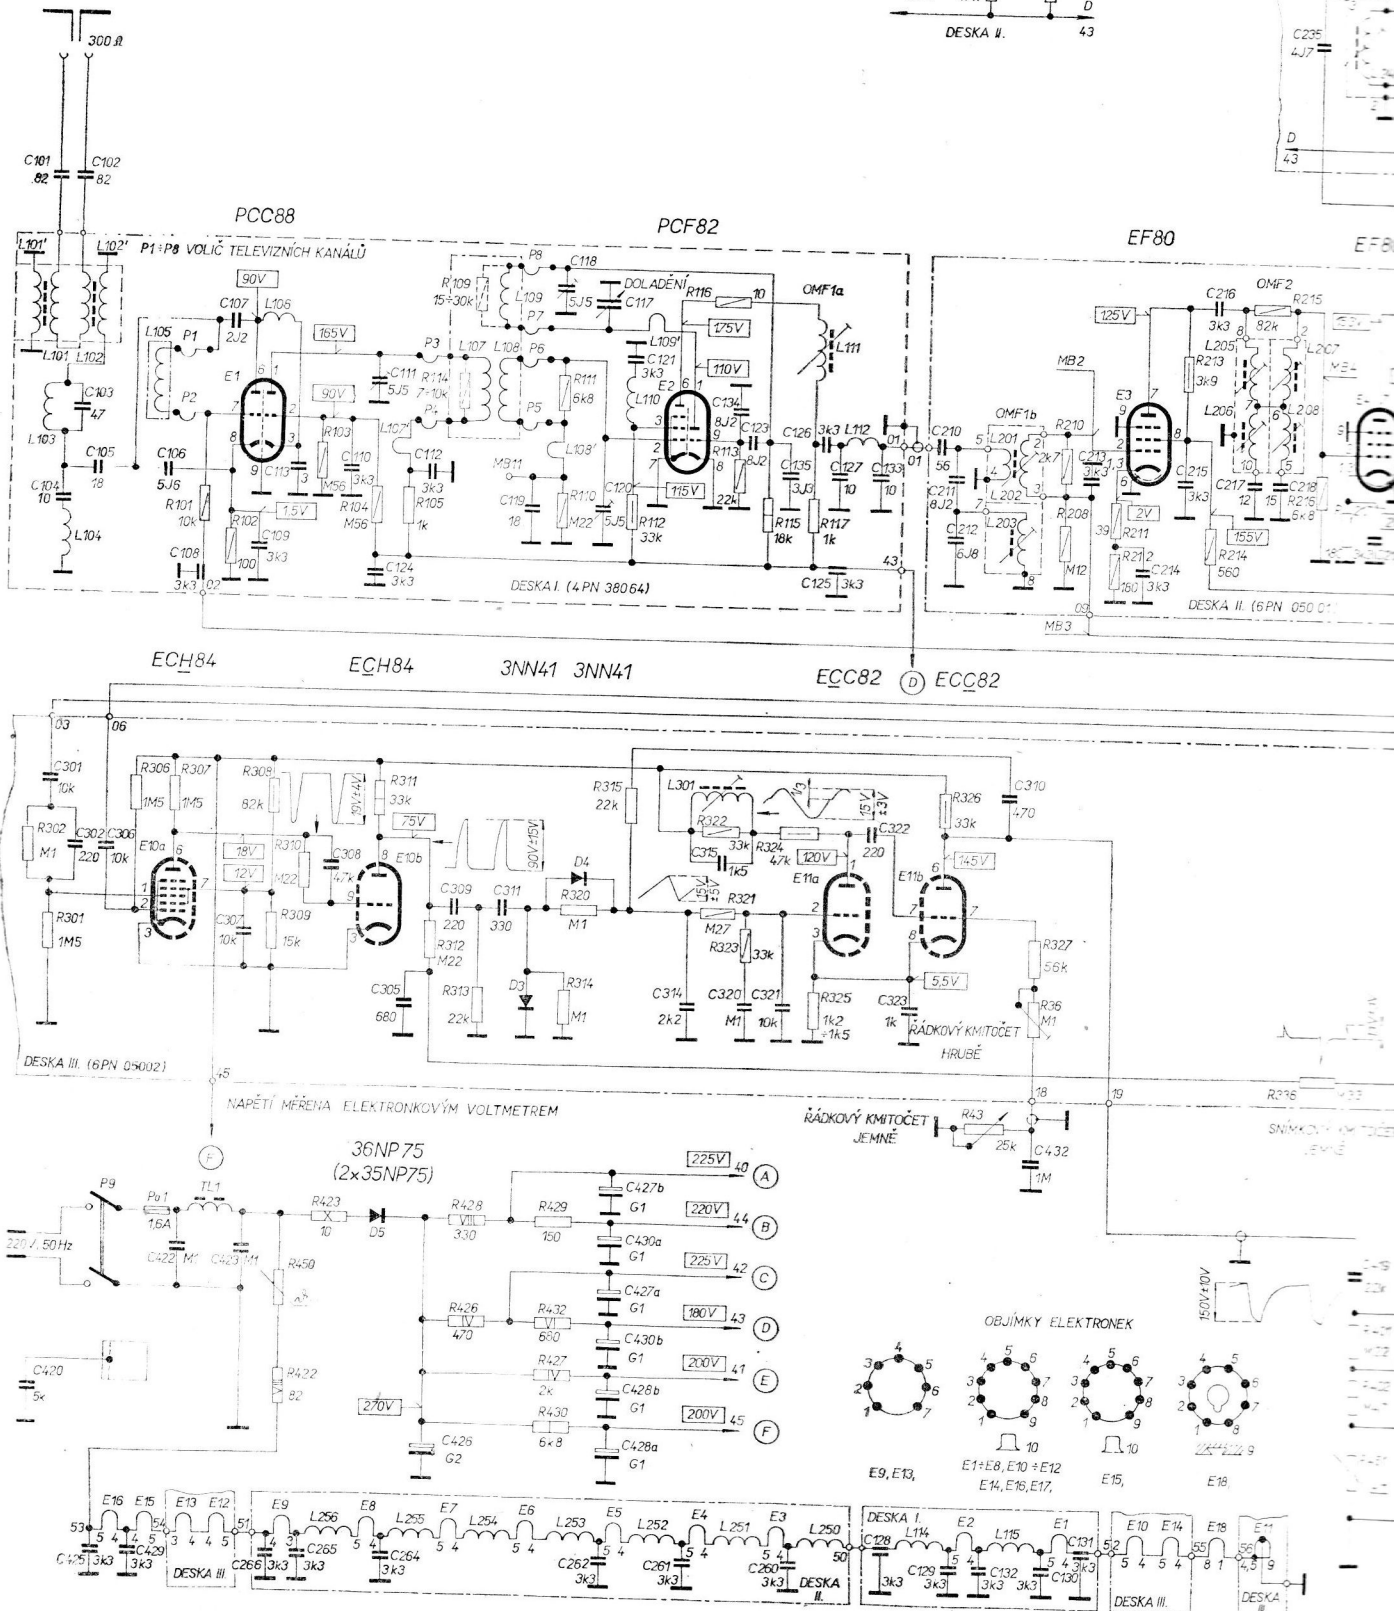


R	101, 102	103	104, 105, 114, 109	111, 110	112	116, 113, 115, 117	(450)	210, 208, 211, 212, 213, 214	215	216, 217
R	302, 301, 306, 307	308, 309, 450, 422, 310, 423, 311	312, 428, 426, 313, 429, 432, 427, 430, 314, 320, 315, 322, 321, 323, 324, 325	326, 43	327, 36					
C	101, 104, 102, 103, 105	106, 108, 107	109, 113, 110, 111, 124, 112	119, 118, 117, 120, 121	134, 123, 135	126, 127, 125, 133 (450), 210, 211, 212	213	214	215, 216, 217	218, 219
C	420, 301, 302, 425, 306, 429, 4, 22	307, 423, 266, 265, 308	264, 305, 426, 309	311	262, 427, 430, 428	314, 261, 315, 320, 321, 260, 322, 128, 323, 310, 129	132, 432, 130	131		
L	101, 101, 103, 104, 102, 102, 105	106	256	255, 107, 107, 109, 108, 254, 108	253, 110, 109, 252, 301	251	111, 250, 112, 114	201, 202, 203, 115		205, 206, 207, 208

PLATÍ PRO 415U:
(MÍSTO R227)

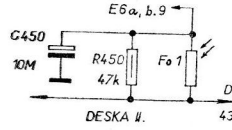

24	216, 217, 246, 218, 247, 248, 219, 220, 250, 249, 223, 253, 251, 225, 256, 224, 257, 226, 250, 290, 227, 22, 228, 229, 261, 230, 265, 234, 240, 42, 351, 238, 352, 21, 242, 41, 353, 241, 236, 355, 235, 239, 252, 207, 360, 359, 361, 48, 47, 336, 401, 402, 451, 337, 403, 45, 44, 338, 404, 339, 409, 410, 340, 39, 341, 342, 46, 346, 506, 347, 335, 348, 412, 471, 452, 349, 37, 333, 328, 350, 334, 329, 421,
216, 217, 218, 235, 219, 239, 220, 240, 241, 222, 221, 242, 243, 226, 227, 228, 244, 248, 245, 249, 251, 250, 229, 230, 252, 254, 253, 257, 233, 341, 231, 413, 431, 234, 342, 346, 232, 451, 347, 419, 401, 330, 328, 333, 403, 334, 335, 404, 336, 410, 402, 409, 337, 339, 412, 339, 508, 509, 418, 411, 424, 417, 340, 326, 416, 205, 206, 207, 208, 240, 209, 210, 211, 243, 244, 212, 213, 214, 220, 405, 402, 221, 245, 246, 247, 222, 230, 404, 223, 235,	

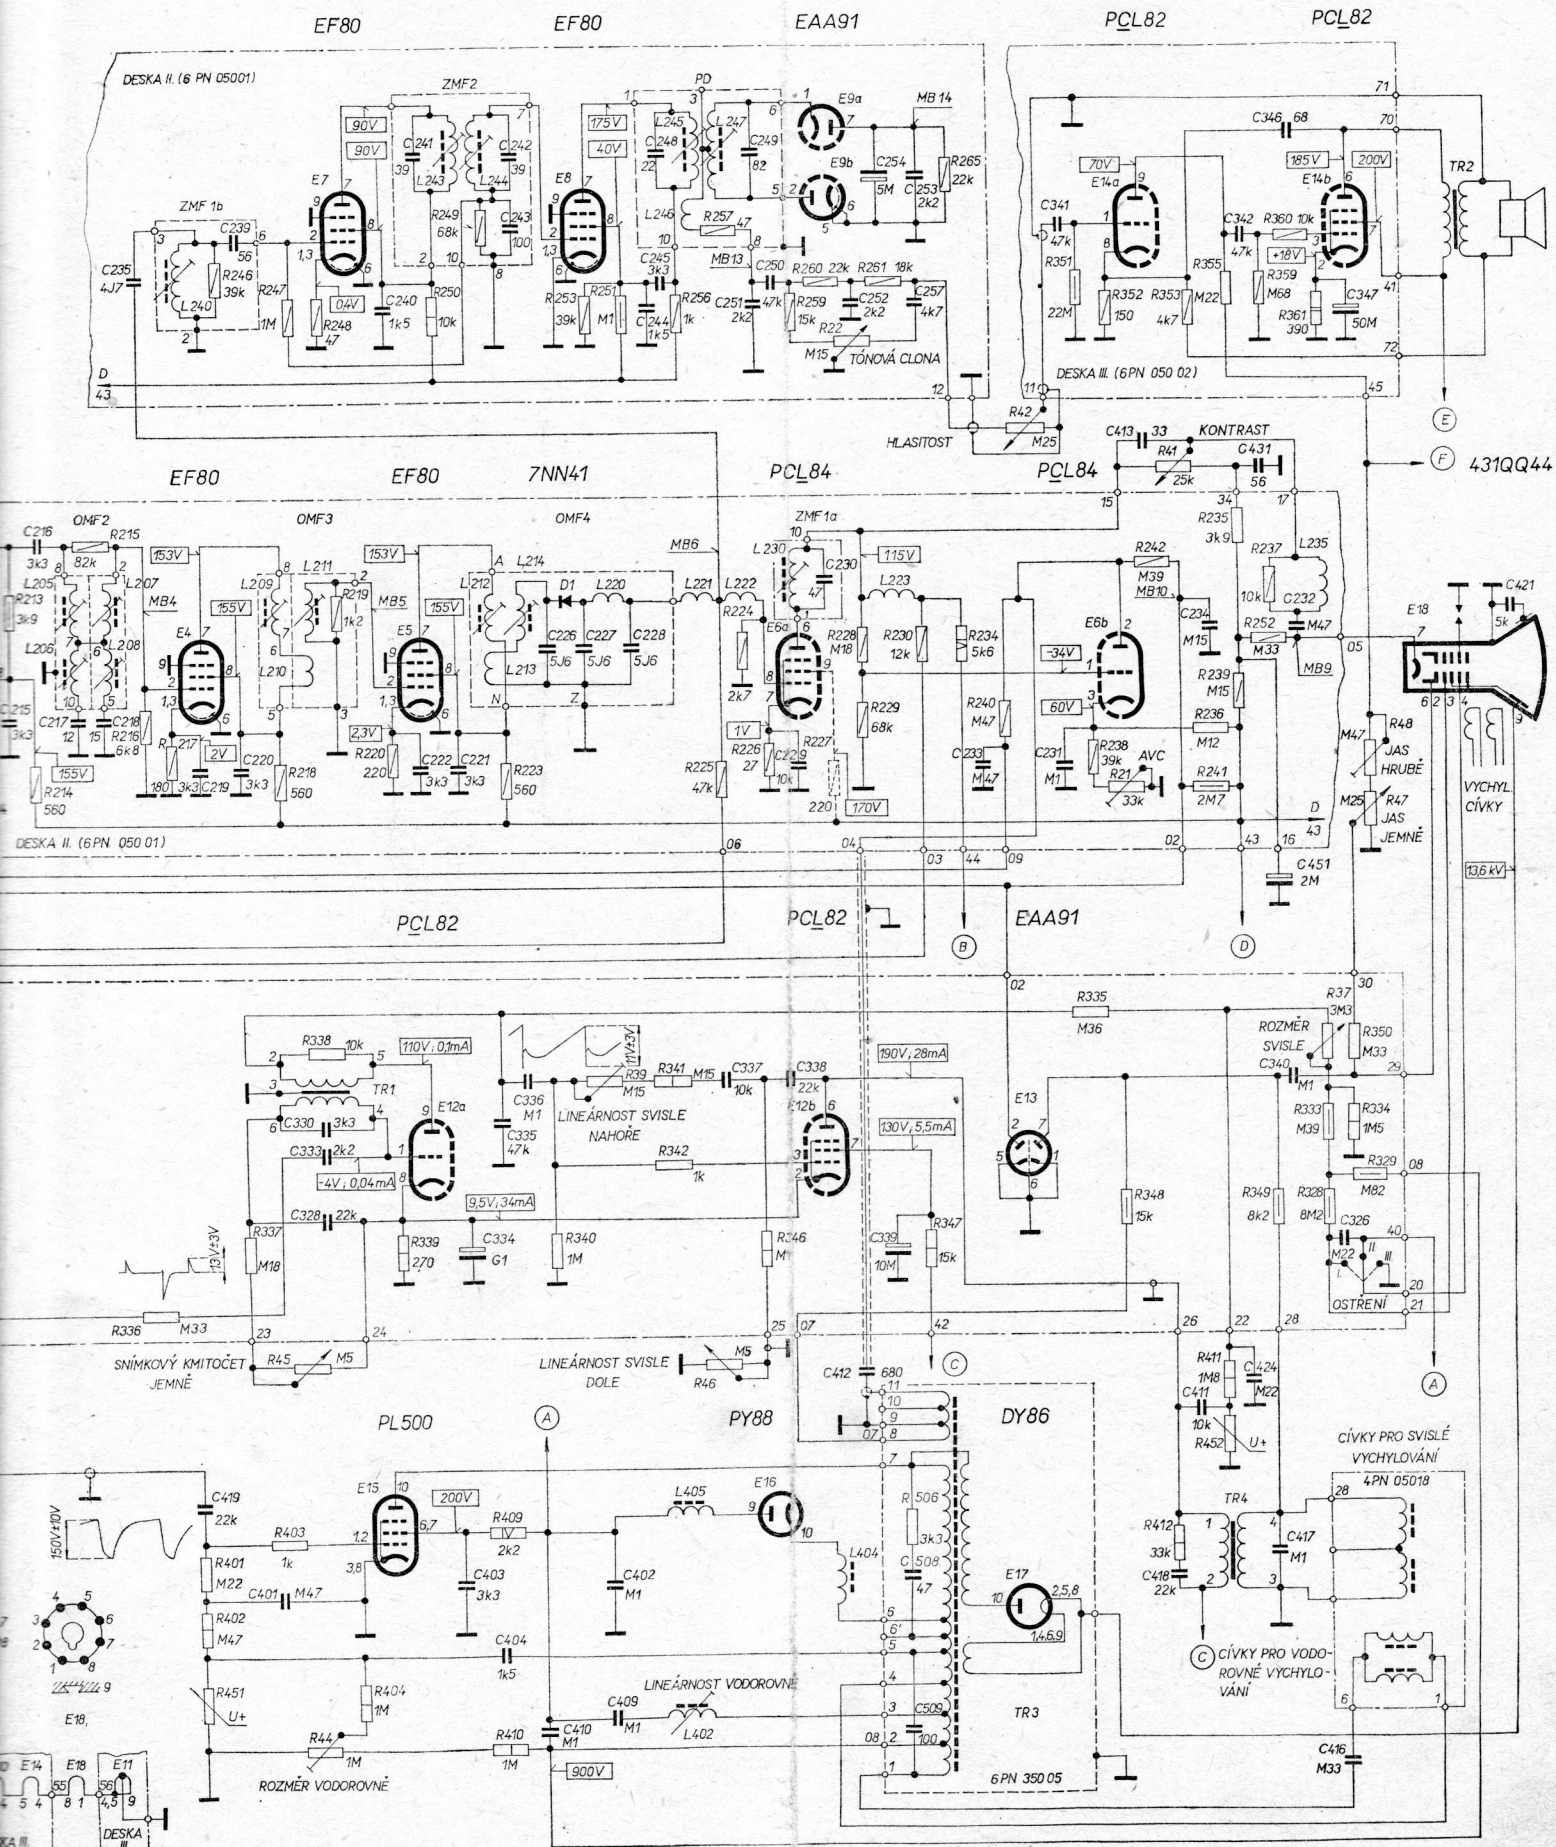

Zapojení televizních přijímačů 4113U „STANDARD“, 4114U „PALIAS“ a 4115U „LUNETA“ Příloha XVII